





## wall decal (extra large) INSTALLATION INSTRUCTIONS

**1** In order for your decal to stick, you need a clean, smooth, dust free and dry surface. For freshly painted walls, allow 1 week for the paint to dry before attaching your wall decal.

**2** Measure the height and width of your surface. Decal can be difficult to reapply once you've used it, so make sure you have your position right on the first try. Try taping the decal in the desired position, so you can take a step back and examine the placement before you apply.

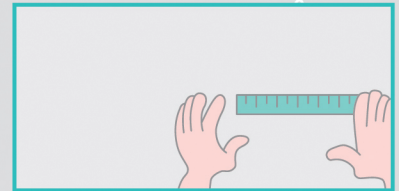

**3** Start at the top edge of the wall decal. Peel back 1 ft. of the backing paper so the sticky side is exposed. Place the decal in the desired location with the sticky vinyl against the wall.

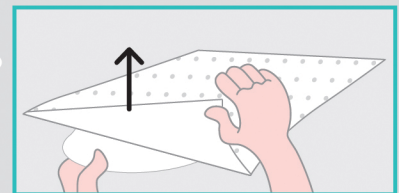

**4** Gently begin to remove the backing paper while use the squeegee included in the package to smooth wall decal to surface working from the center out.




**5** Continue in 1 ft. increments peeling and smoothing until you reach the bottom edge of your wall decal.



**6** Use a heat gun or a hair dryer to better stick the decal on the surface (specially the textured surfaces). Make sure do not overheat the decal.

Well done!

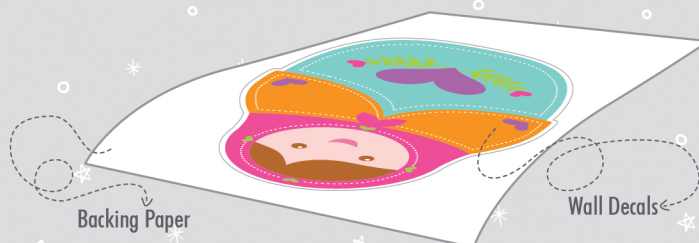

**MORE**  
WALL DECALS AVAILABLE AT  
[WWW.CLAUVINCK.COM](http://WWW.CLAUVINCK.COM)

SELF-STICK PERMANENT WALL DECAL | WORKS ON MOST SMOOTH FLAT & DRY SURFACE.

FOR LARGER DECALS IT IS EASIER WITH A SECOND PERSON