


wall decal (geometric pattern) INSTALLATION INSTRUCTIONS

1 In order for your decal to stick, you need a clean, smooth, dust free and dry surface. For freshly painted walls, allow 1 week for the paint to dry before attaching your wall decal.


2 Measure the surface on which you will install the wall decals. Calculate the spacing between each decal according to the size of the surface and the amount of decals you have.

3 Calculate the spacing between each decal according to the size of the surface and the amount of decals you have. Use a ruler and a pencil to mark out the location of the decals. With the pencil, you plot out the locations of the decals. When you get the pattern right, just apply the individual decals on top of the marks you made.

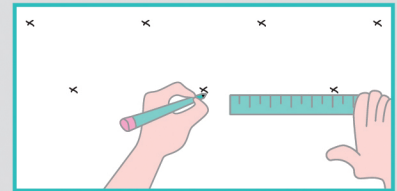

4 Carefully peel decals away from the backing paper.

5 Position and apply decal to wall. To reposition, slowly peel decal away from the wall, reposition decal and reapply.

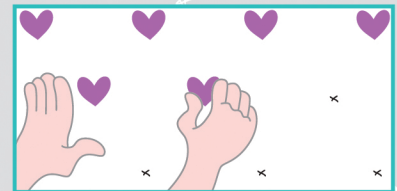


6 Once the decal is placed, apply pressure with a squeegee or a clean cloth, gently smooth out all bubbles starting from the middle and moving towards edges.



7 Optional for non flat surface. Use a heat gun or a hair dryer to better stick the vinyl on textured surfaces. Make sure do not overheat the decal.

Well done!

IT IS SO MUCH FUN TO WORK WITH A SECOND PERSON

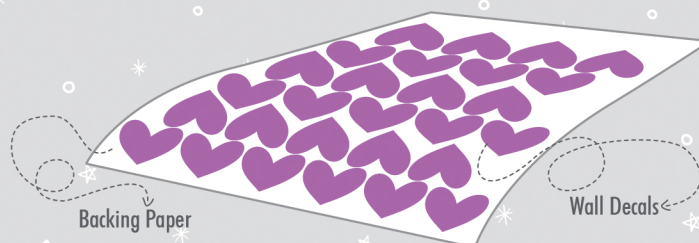

Backing Paper

Wall Decals

MORE
WALL DECALS AVAILABLE AT
WWW.CLAUVINCK.COM

SELF-STICK REMOVABLE WALL DECAL | WORKS ON MOST SMOOTH FLAT & DRY SURFACE.